

## AUTO**LIGHT** FAQ (frequently asked questions)

### AutoLight will not turn on.

Firstly, ensure batteries are correctly inserted. If they are, they may have discharged. Replace the batteries, and check the battery fittings. If the light tester will still not turn on, the internal electronics may have failed - return unit for servicing.

### The light globe is not working.

Return unit for servicing.

### AutoLight turns itself off during use.

The batteries may have discharged. Replace the batteries.

### How often do I need to calibrate my AutoLight Tester?

The AutoLight needs to be calibrated every two years.

### How long does it take to calibrate my AutoLight?

It takes one day to calibrate an AutoLight (excluding shipping and repairs).

### Where do I send my AutoLight for calibration?

Send it to AutoTest Products (see contacts) or your local distributor.

### What should I send when my AutoLight needs service and calibration?

Please send your AutoLight, business card and contact details.

### How long does my warranty last?

12 months parts and labour for AutoStop meters.

3 months parts and labour for repairs.