

Innovative Vehicle Testing & Diagnostic Products

How do I turn the power on my printer?

Press and hold POWER button down for 2-3 seconds, or until the power indicator light turns red.

Why is the red light on my printer flashing?

When the printer is on, but has been inactive for a time, the red light will flash as the printer has entered power saving mode. To print again, press the Power button and the red light will stop flashing.

Why isn't the Bluetooth printer connecting?

When connecting, it can take up to 20 seconds for the printer to pair. You will see the blue light flashing when it has paired. Restart the Bluetooth printer and make sure it is charged up.

My print-outs are faded. What should I do?

This means that the printer is almost flat. Charge your printer, and it will print darker.

What does the blue blinking light on my printer mean?

That the battery is almost flat. This means you must charge the device. (If the printer is charging refer to the question below).

Can I use the printer while charging it?

Yes. While the printer is charging the blue light will turn on. When the printer is off the light will be solid. When the printer is turned on while charging the blue light will flash.

How do I correctly charge my printer?

Refer to your Printer User Manual point 3.2.7 BATTERY CHARGING on your USB, or download from our website - <u>https://autotest.net.au/product/autostop-mini-plus-brake-meter/</u>